





IPS (Internal Perforated Supply) Removal Instructions


Tools needed: 5/16" nut driver and gloves.

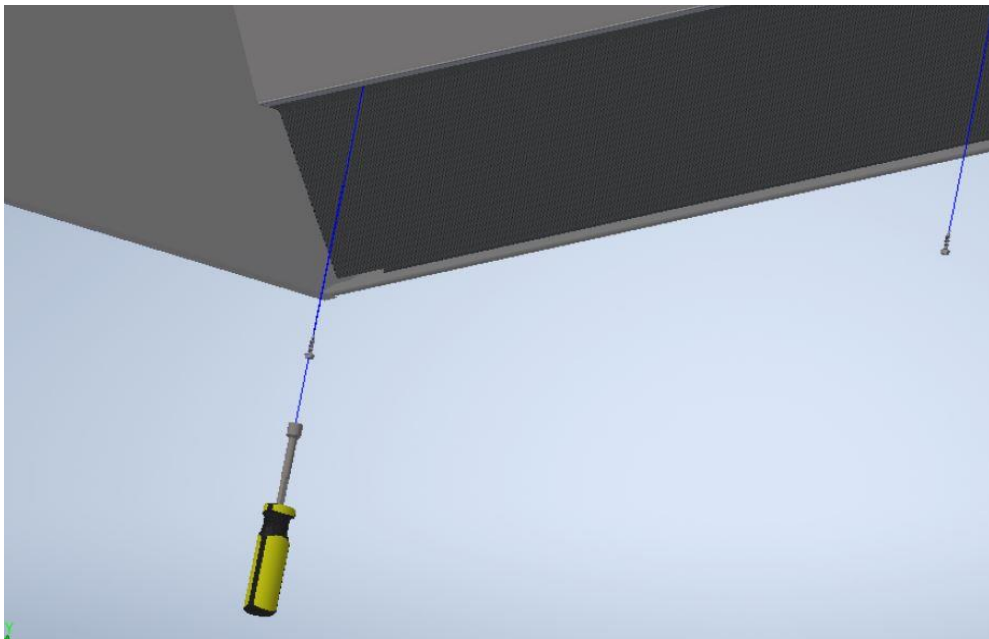


Use 5/16" nut driver to remove #8 hex head screws from IPS.

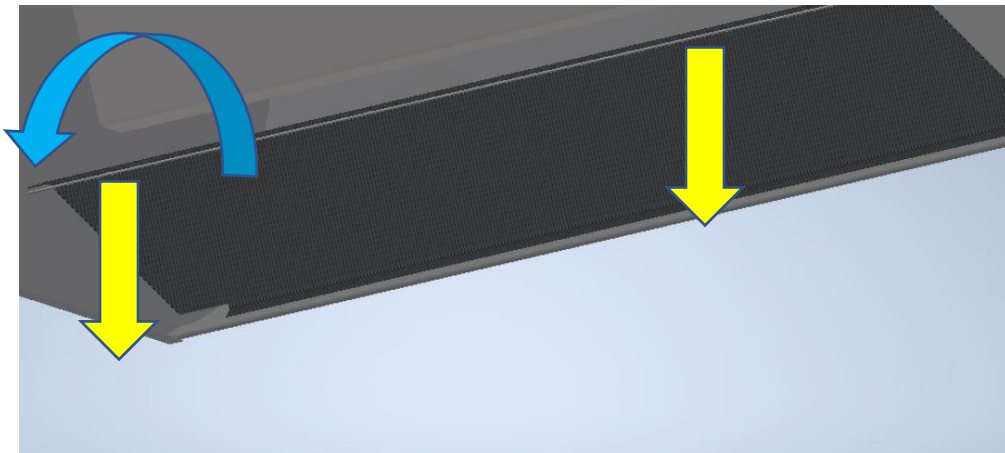

Rotate IPS down by pulling on trim strip where indicated (be cautious to avoid damage to hood and IPS).

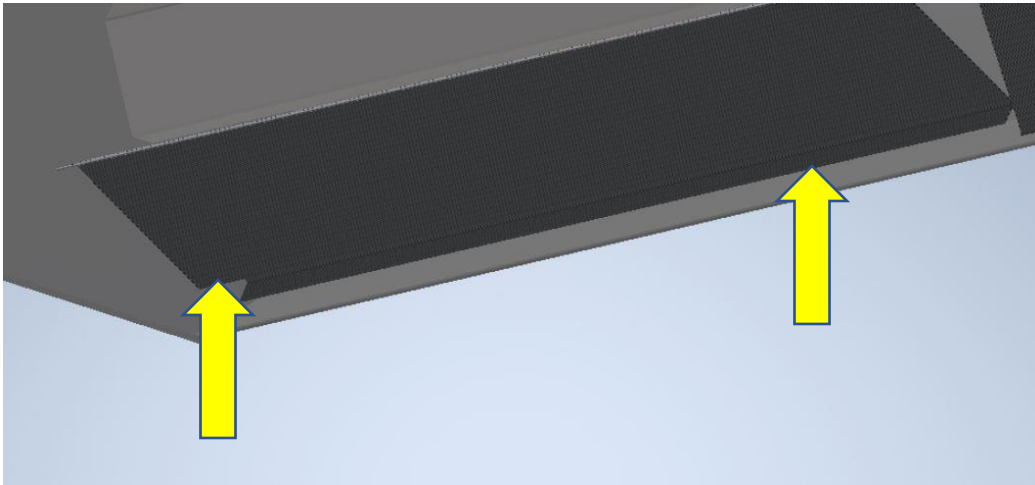

Push up on IPS where indicated to remove from front hem.

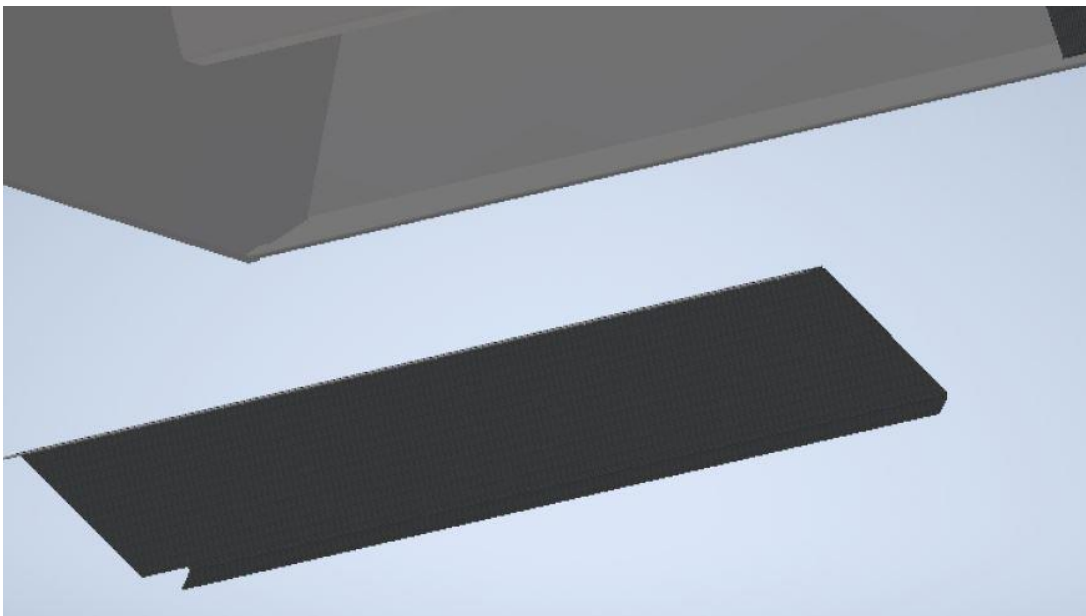

IPS is now free to be removed. Repeat if IPS is in two (2) pieces.

Reverse process to reinstall.

CAUTION

Perforated metal edges are sharp.